




# MANUAL

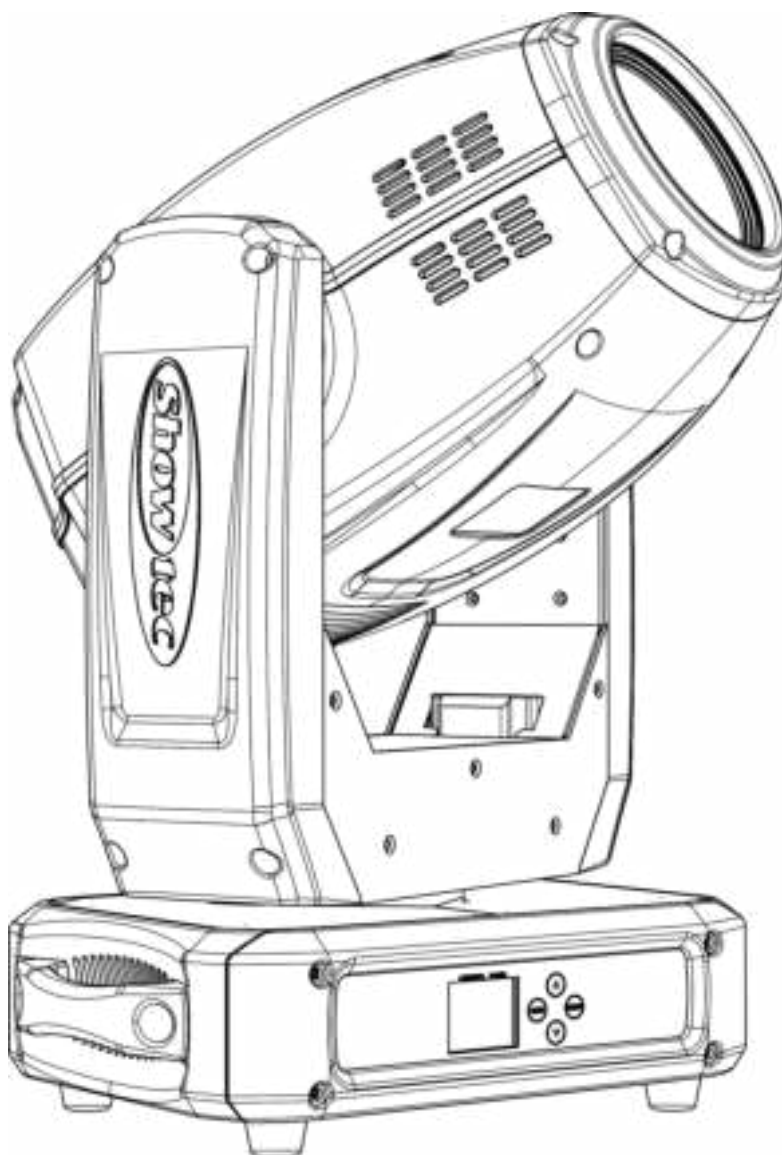

ENGLISH

## Phantom 3R Hybrid

## V1

Ordercode: 40074

## Table of contents

|   |    |
|---|----|
| <b>Warning</b>  | 2  |
| Safety Instructions                                   | 2  |
| Operating Determinations                              | 4  |
| Rigging   | 4  |
| Connection with the mains                             | 5  |
| Return Procedure                                      | 5  |
| Claims  | 5  |
| <b>Description of the device</b>                      | 6  |
| Features  | 6  |
| Frontside   | 6  |
| Backside  | 7  |
| <b>Installation</b>                                   | 7  |
| Installing the Lamp                                   | 7  |
| <b>Set Up and Operation</b>                           | 8  |
| Control Modes   | 9  |
| One Phantom (Auto, Manual)                            | 9  |
| One Phantom (Sound-controlled)                        | 9  |
| Multiple Phantoms (Master/Slave control)              | 9  |
| Multiple Phantoms (DMX Control)                       | 10 |
| Fixture Linking                                       | 11 |
| Data Cabling  | 11 |
| Control Panel   | 12 |
| Control Mode  | 12 |
| DMX Addressing  | 12 |
| Menu Overview   | 13 |
| Main Menu Options                                     | 14 |
| DMX Addressing  | 14 |
| Built-in Programs Mode                                | 15 |
| 1. DMX Mode   | 15 |
| 2. Slave Mode   | 15 |
| 3. Auto Mode  | 15 |
| 4. Sound-controlled Mode                              | 15 |
| 5. Manual Mode  | 16 |
| Advanced Settings                                     | 17 |
| 1. Lamp Settings                                      | 18 |
| 2. Maintenance  | 18 |
| System Information                                    | 19 |
| DMX Channels  | 19 |
| 14 Channels   | 19 |
| 19 Channels   | 22 |
| <b>Maintenance</b>                                    | 27 |
| Replacing the Fuse                                    | 27 |
| Replacing a Gobo From the Rotating Gobo Wheel         | 27 |
| Glass Gobo Orientation                                | 28 |
| Static Gobo Wheel + Rotating Gobo Wheel + Color Wheel | 29 |
| <b>Troubleshooting</b>                                | 29 |
| No Light  | 29 |
| No Response to DMX                                    | 30 |
| <b>Product Specifications</b>                         | 31 |
| <b>Dimensions</b>                                     | 32 |
| <b>Notes</b>  | 33 |

## Warning



**For your own safety, please read this user manual carefully  
before your initial start-up!**




## Unpacking Instructions

Immediately upon receiving this product, carefully unpack the carton and check the contents to ensure that all parts are present, and have been received in good condition. Notify the dealer immediately and retain packing material for inspection if any parts appear damaged from shipping or the carton itself shows signs of mishandling. Save the carton and all packing materials. In the event that a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

### Your shipment includes:

- Showtec Phantom 3R Hybrid
- Pro power cable (1,5 m)
- 2 x quick-lock brackets
- User manual

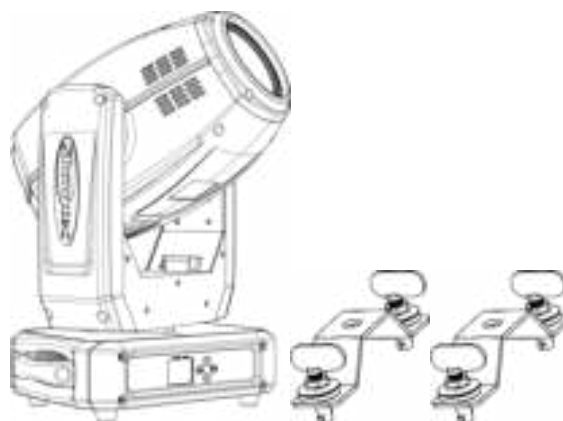

**CAUTION!**  
**Keep this device away from rain and moisture!**  
**Unplug mains lead before opening the housing!**



## Safety Instructions

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow the instructions of this manual



**CAUTION! Be careful with your operations.**  
**With a dangerous voltage you can suffer**  
**a dangerous electric shock when touching the wires!**



Before the initial start-up, please make sure that there is no damage caused by transportation. Should there be any, consult your dealer and do not use the device.

To maintain perfect condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes contained in this manual.


Please consider that damages caused by manual modifications to the device are not subject to warranty.

This device contains no user-serviceable parts. Refer servicing to qualified technicians only.

### IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

- Never let the power cord come into contact with other cables! Handle the power cord and all connections with the mains with particular caution!
- Never remove warning or informative labels from the unit.
- Never use anything to cover the ground contact.
- Never lift the fixture holding it by the projector-head, as the mechanics may be damaged. Always hold the fixture by the transport handles.
- Never place any material over the lens.
- Never run the device without a lamp.
- Never look directly into the light source.
- Never leave any cables lying around.
- Never loosen the screws of the rotating gobo otherwise you risk opening of the ball bearing.
- Do not insert objects into air vents.
- Do not connect this device to a dimmer pack.
- Do not switch the device on and off in short intervals, as this will reduce the device's life.
- Do not touch the device's housing bare-handed during its operation (housing becomes very hot). Allow the fixture to cool for at least 5 minutes before handling.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Only use the device indoors, avoid contact with water or other liquids.
- Only operate the fixture after having checked if the housing is firmly closed and all screws are tightly fastened.
- Only operate the device after having familiarized with its functions.
- Avoid flames and do not put close to flammable liquids or gases.
- Always keep the case closed while operating.
- Always allow a free air space of at least 50 cm around the unit for ventilation.
- Always disconnect power from the mains, when device is not used or before cleaning! Only handle the power cord holding it by the plug. Never pull out the plug by tugging the power cord.
- Make sure that the device is not exposed to extreme heat, moisture or dust.
- Make sure that the available voltage is not higher than stated on the rear panel.
- Make sure that the power cord is never crimped or damaged. Check the device and the power cord from time to time.
- If the lens is obviously damaged, it has to be replaced, so that its functions are not impaired due to cracks or deep scratches.
- If device was dropped or struck, disconnect mains power supply immediately. Have a qualified engineer inspect for safety before operating.
- If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- If your Showtec device fails to work properly, discontinue the use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Showtec dealer for service.
- For adult use only. Moving head must be installed beyond the reach of children. Never leave the unit running unattended.
- Never attempt to bypass the thermostatic switch or fuses.
- For replacement use fuses of same type and rating only.
- The user is responsible for correct positioning and operating of the Phantom. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- Repairs, servicing and electric connection must be carried out by a qualified technician.
- WARRANTY: Till one year after date of purchase.

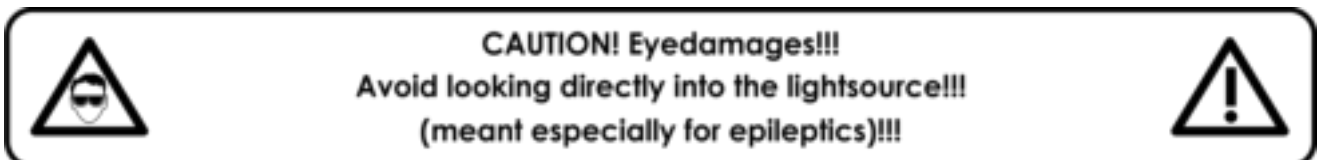

### Operating Determinations

- This device is not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.
- The minimum distance between light output and the illuminated surface must be bigger than 10 meters.
- The maximum ambient temperature  $t_a = 40^\circ\text{C}$  must never be exceeded.
- The relative humidity must not exceed 50 % with an ambient temperature of  $40^\circ\text{C}$ .
- If this device is operated in any other way than the one described in this manual, the product may suffer damages and the warranty becomes void.
- Any other operation may lead to dangers like short-circuit, burns, electric shock, crash, etc.

*You endanger your own safety and the safety of others!*

### Rigging


*Please follow the European and national guidelines concerning rigging, trussing and all other safety issues.*

*Do not attempt the installation yourself !*

*Always let the installation be carried out by an authorized dealer !*

### Procedure:

- If the Phantom is lowered from the ceiling or high joists, professional trussing systems have to be used.
- Use a clamp to mount the Phantom, with the mounting bracket, to the trussing system.
- The Phantom must never be fixed swinging freely in the room.
- The installation must always be secured with a safety attachment, e.g. an appropriate safety net or safety cable.
- When rigging, derigging or servicing the projector, always make sure, that the area below the installation site is secured and that there are not any unauthorized people around.

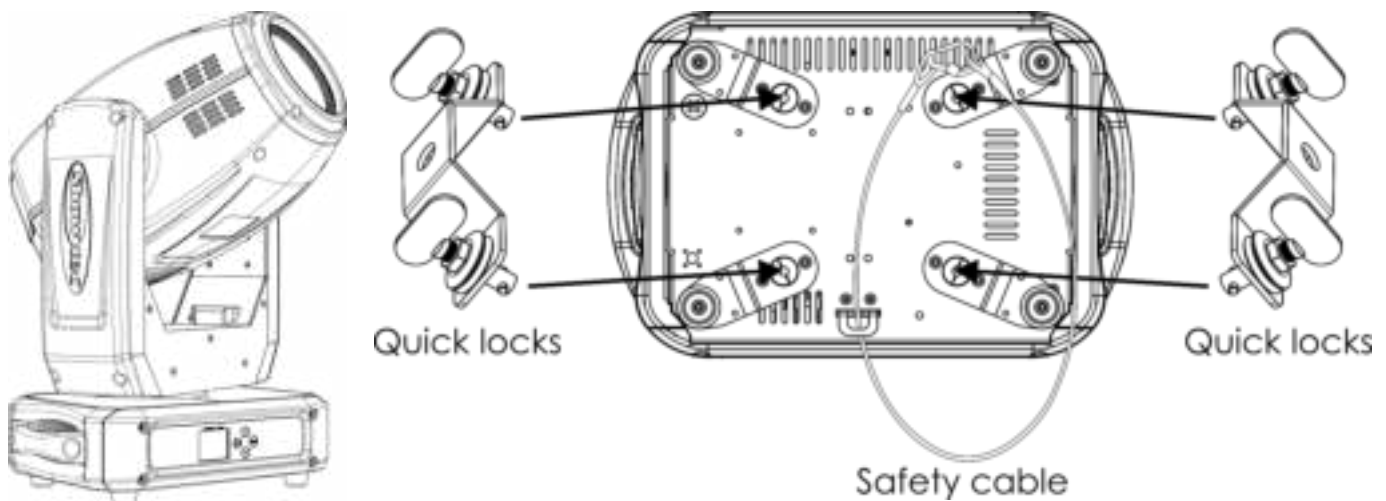


The Phantom can be placed on a flat stage floor or mounted to any kind of truss with quick locks and a clamp.

*Improper installation can cause serious injuries and/or damage of property!*

**Connection with the mains**

Connect the device to the mains with the power-plug.

Always check if the right color cable is connected to the right place.

| International   | EU Cable     | UK Cable | US Cable      | Pin               |
|---|--------------|----------|---------------|-------------------|
| L   | BROWN        | RED      | YELLOW/COPPER | PHASE             |
| N   | BLUE         | BLACK    | SILVER        | NEUTRAL           |
|  | YELLOW/GREEN | GREEN    | GREEN         | PROTECTIVE GROUND |

*Make sure that the device is always properly connected to the earth!*

*Improper installation can cause serious injuries and/or damage of property!*

**Return Procedure**

Returned merchandise must be sent prepaid and in the original packing, call tags will not be issued. Package must be clearly labeled with a Return Authorization Number (RMA number). Products returned without an RMA number will be refused. Highlite will not accept the returned goods or any responsibility. Call Highlite 0031-455667723 or mail [aftersales@highlite.nl](mailto:aftersales@highlite.nl) and request an RMA prior to shipping the fixture. Be prepared to provide the model number, serial number and a brief description of the cause for the return. Be sure to properly pack fixture, any shipping damage resulting from inadequate packaging is the customer's responsibility. Highlite reserves the right to use its own discretion to repair or replace product(s). As a suggestion, proper UPS packing or double-boxing is always a safe method to use.

**Note: If you are given an RMA number, please include the following information on a piece of paper inside the box:**

- 01) Your name
- 02) Your address
- 03) Your phone number
- 04) A brief description of the symptoms

**Claims**

The client has the obligation to check the delivered goods immediately upon delivery for any shortcomings and/or visible defects, or perform this check after our announcement that the goods are at their disposal. Damage incurred in shipping is the responsibility of the shipper; therefore the damage must be reported to the carrier upon receipt of merchandise.

It is the customer's responsibility to report and submit claims with the shipper in the event that a fixture is damaged due to shipping. Transportation damage has to be reported to us within one day after receipt of the delivery.

Any return shipment has to be made post-paid at all times. Return shipments must be accompanied with a letter defining the reason for return shipment. Non-prepaid return shipments will be refused, unless agreed otherwise in writing.

Complaints against us must be prepared in writing or sent by fax within 10 working days after receipt of the invoice. After this period complaints will not be handled anymore.

Complaints will only then be considered if the client has so far complied with all parts of the agreement, regardless of the agreement from which the obligation is resulting.



## Description of the device

### Features

The Phantom 3R Hybrid is a moving head with high output and great effects.

- Input voltage: 100-240V AC, 50/60Hz
- Power consumption: 270W
- Light source: 1 x YODN R3/150W, 8600K
- Dimmer: 0-100%
- Strobe: 0-20Hz
- Beam angle: 3-20°
- Focus: Motorized focus
- Zoom: Motorized zoom
- DMX control: via standard DMX controller
- DMX channels: 14, 19 channels
- Built-in automatic programs + built-in sound-activated programs
- Reverse Pan / Tilt movement
- Special: Pan / Tilt movement blackout
- Pan 0° -- 540°, Tilt 0° -- 270°
- Pan/Tilt resolution: 16 bit
- Control: Stand alone, Manual, Sound-controlled, Master/Slave, DMX-512
- Color wheel: 12 dichroic colors + white
- Static gobo wheel: 17 gobos
- Rotating gobo wheel: 1 glass gobo + 7 metal gobos
- Gobo size: Glass gobo: 13,75 mm (gobo size); 11,07 mm (image diameter); 1,16 mm (gobo thickness)  
Metal gobo: 13,75 mm (gobo size); 11,07 mm (image diameter); 0,62 mm (gobo thickness)
- Color functions: Split colors, Rainbow-flow effect
- Gobo functions: Gobo-flow effect, Gobo shake
- Rotation: Bi-directional
- Prism 1: circular rotating prism
- Prism 2: linear rotating prism
- Housing: Metal & flame-retardant plastic
- Connection: 3-pin XLR IN/OUT, Pro power connector IN/OUT
- Fuse: F5AL/250V
- Dimensions: 325 x 210 x 505 mm (LxWxH)
- Weight: 16,7 kg

### Optional accessories:

**82623** – Showtec YODN R3 Lamp, 150W

### Frontside

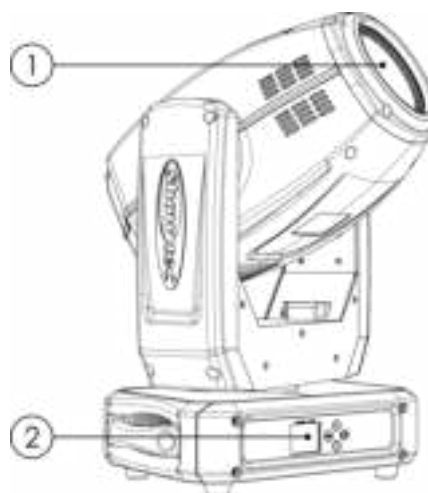
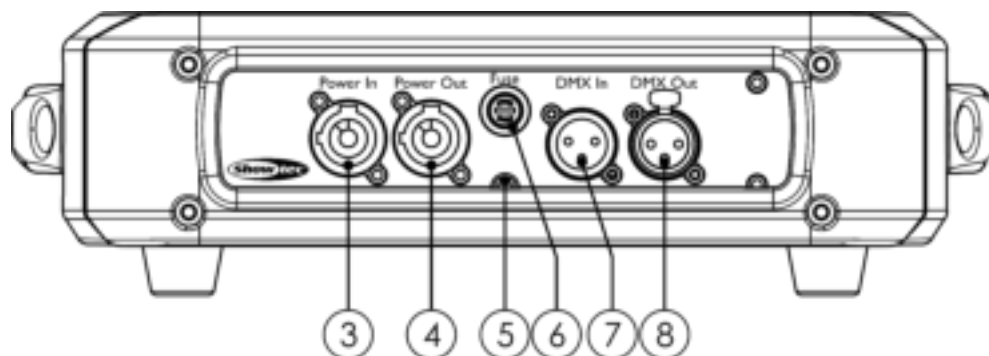


Fig. 01

01) 1 x YODN R3/150W

02) LCD display + control buttons

**Backside****Fig. 02**

- 03) 100-240V Pro power connector Blue IN
- 04) 100-240V Pro power connector Grey OUT
- 05) Ground/earth connection
- 06) Fuse F5AL/250V
- 07) 3-pin DMX signal connector IN
- 08) 3-pin DMX signal connector OUT

**Installation**

Remove all packing materials from the Phantom 3R Hybrid. Check if all foam and plastic padding is removed. Connect all cables.

**Do not supply power before the whole system is set up and connected properly.**

**Always disconnect from electric mains power supply before cleaning or servicing.**

**Damages caused by non-observance are not subject to warranty.**

**Installing the Lamp**

The Showtec Phantom 3R Hybrid uses the R3 lamp, 150W (**ordercode [82623](#)**). Use only the appropriate lamp for your unit. Note that product versions, that use other lamps, may be offered in the future. Check your product specification label for information.

**Always disconnect from electric mains power supply before changing lamps.**

The lamp has to be replaced when it is damaged or deformed due to the heat.

**Do not install lamps of higher wattage!** Lamps of higher wattage generate temperatures which the device was not designed for.

**Damages caused by non-observance are not subject to warranty.**

**Procedure:**

- 01) Disconnect the Phantom from power before installing the lamp and allow the lamp to cool down.
- 02) Remove the 4 lamp housing screws on the back of the moving head (fig. 03).
- 03) Remove the lamp housing cover.
- 04) Remove the old lamp by pushing the lamp to the right (fig. 04) and releasing its left-hand side (fig. 05).
- 05) Loosen the screws and remove the lamp (fig. 06).
- 06) Remove a new lamp from the box and hold it **by the base**. Read lamp instructions. **Do not touch the lamp bulb glass.** Oil on hands shortens the lamp's lifespan. If you touch the bulb glass, wipe it off with a clean, lint free towel and rubbing alcohol.
- 07) Insert the new lamp into the housing and tighten the screws (fig. 06).
- 08) Push the lamp to the right and lock its left-hand side in position (fig. 07).
- 09) Replace the lamp housing cover.
- 10) The Phantom is now ready for use.





Fig. 03

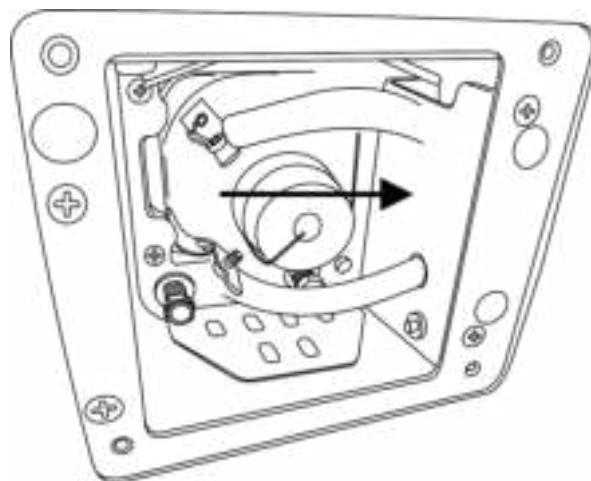


Fig. 04

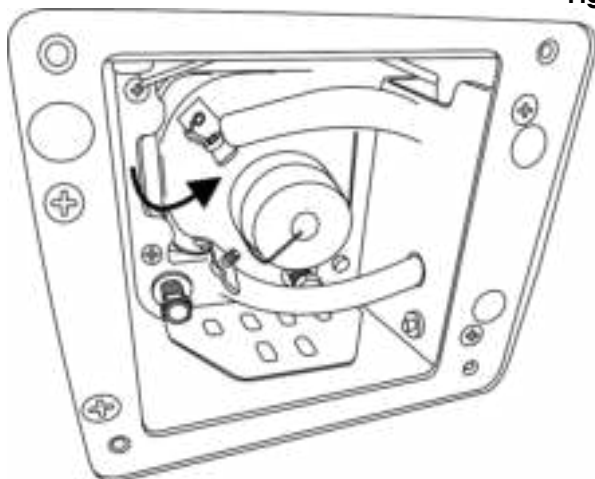


Fig. 05

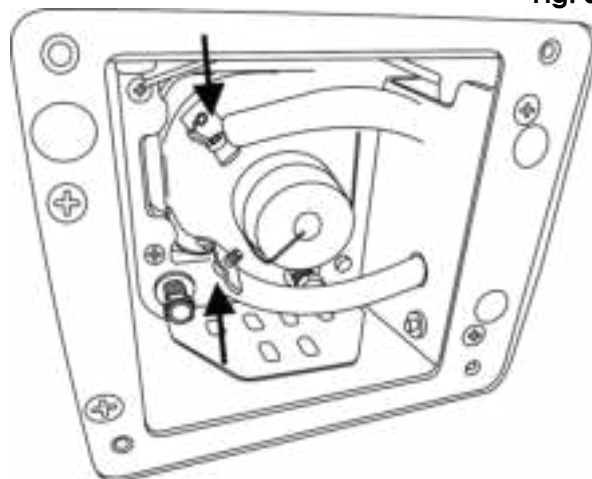


Fig. 06

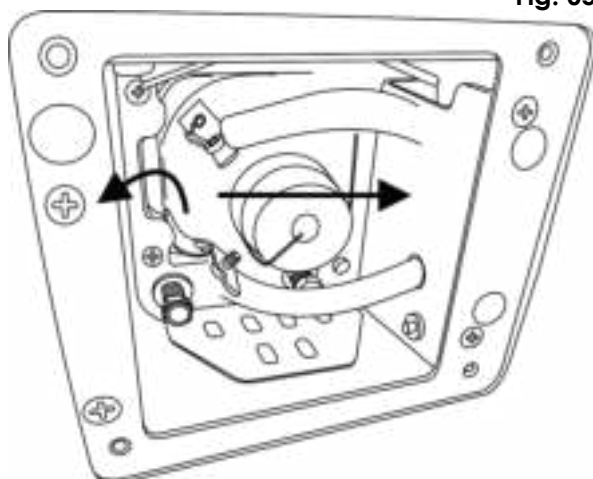


Fig. 07

## Set Up and Operation

Follow the directions below, as they pertain to your preferred operation mode.

Before plugging the unit in, always make sure that the power supply matches the product specification voltage. Do not attempt to operate a 120V specification product on 230V power, or vice versa.

Connect the device to the main power supply.

## Control Modes

There are 5 modes:

- Stand-alone (Auto)
- Manual
- Sound-controlled
- Master/Slave
- DMX-512 (14CH, 19CH)

### One Phantom (Auto, Manual)

- 01) Fasten the effect light to a firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 03) When the Phantom is not connected with a DMX cable, it functions as a stand-alone device. Please see pages 15-16 for more information about the Auto mode and Manual mode.

### One Phantom (Sound-controlled)

- 01) Fasten the effect light to a firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Plug the end of the electric mains power cord into a proper electric power supply socket.
- 03) Turn on the music. If the device is set to sound-control, then the Phantom will react to the beat of the music. Please see page 15 for more information about the sound-control options.

### Multiple Phantoms (Master/Slave control)

- 01) Fasten the effect light onto firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Use a 3-pin XLR cable to connect the Phantom.

The pins:



- 01) Earth
- 02) Signal -
- 03) Signal +

- 03) Link the units as shown in fig. 08. Connect the first unit's DMX "out" socket with the second unit's "in" socket, using a DMX-signal cable. Repeat this process to link the second, third, and fourth units. You can use the same functions on the master device as described on page 15-16 (Auto mode, Manual mode or Sound-controlled mode). This means that you can set your desired operation mode on the master device and all slave devices will react the same as the master device.

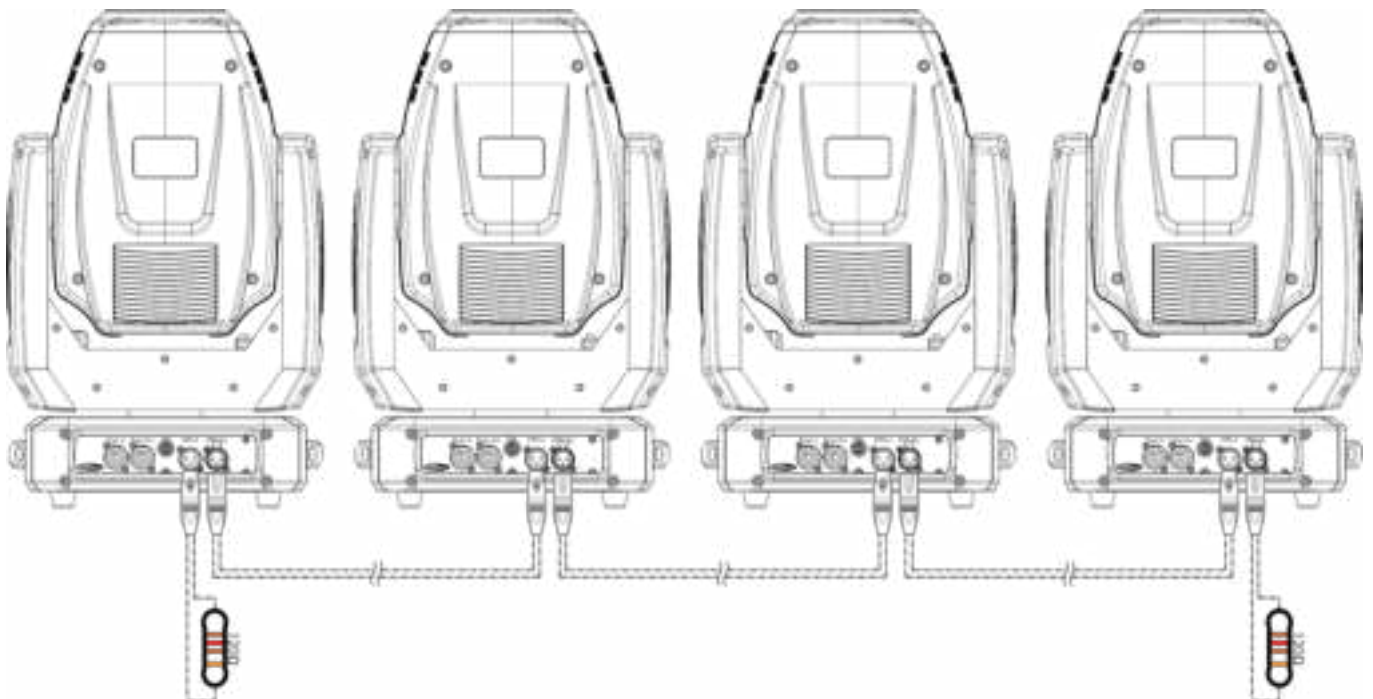


Fig. 08

## Multiple Phantoms (DMX Control)

- 01) Fasten the effect light to a firm trussing. Leave at least 0,5 meter on all sides for air circulation.
- 02) Always use a safety cable (ordercode 70140 / 70141).
- 03) Use a 3-pin XLR cable to connect the Phantoms and other devices.



- 04) Link the units as shown in fig. 09. Connect the first unit's DMX "out" socket with the second unit's "in" socket, using a DMX signal cable. Repeat this process to link the second, third, and fourth units.
- 05) Supply electric power: Plug electric mains power cords into each unit's Pro power socket, then plug the other end of the mains power cord into proper electric power supply sockets, starting with the first unit. Do not supply power before the whole system is set up and connected properly.

## Multiple Phantoms DMX Set Up

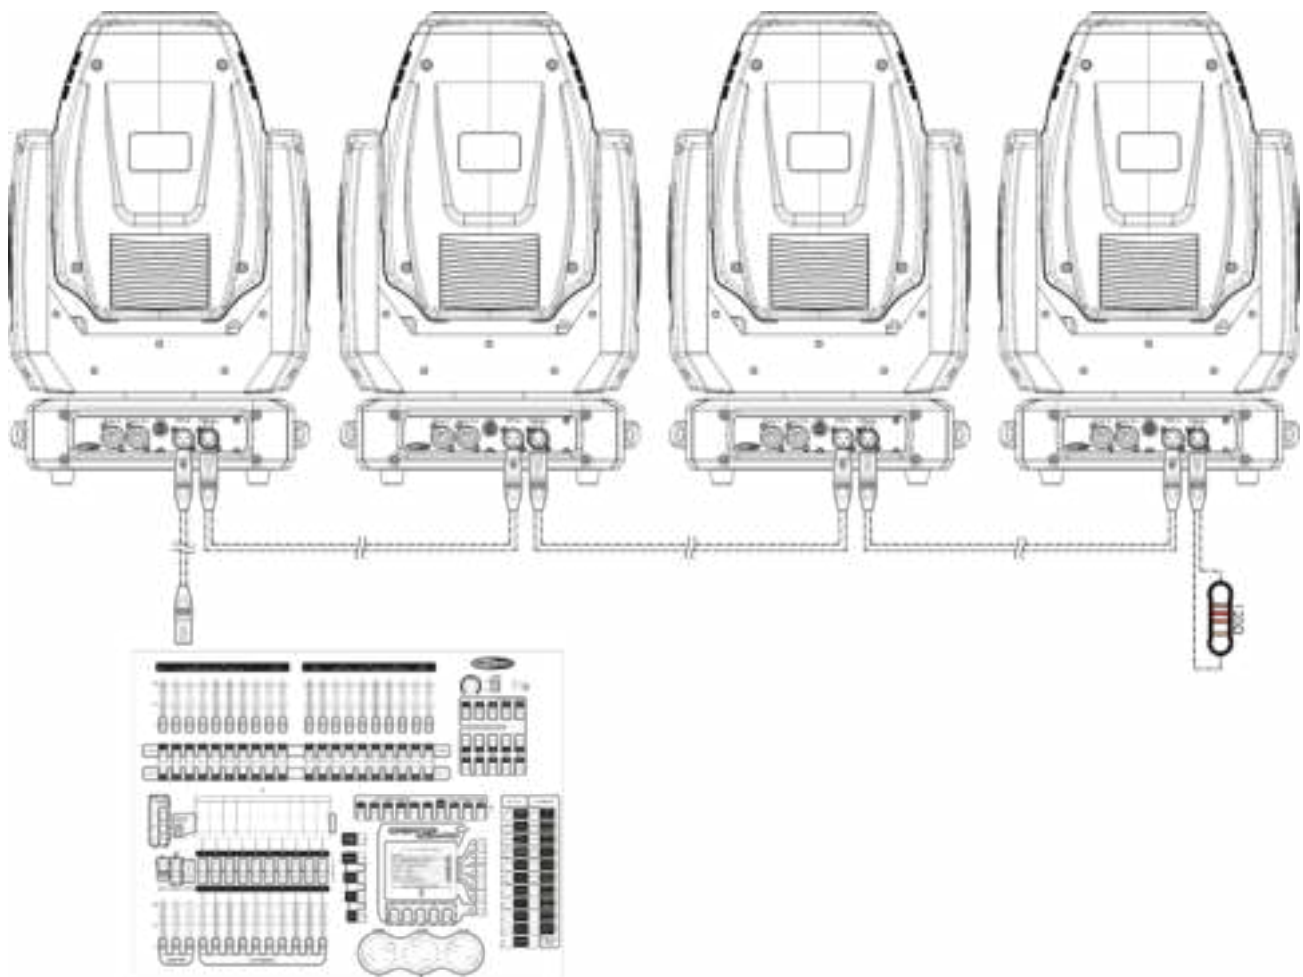



Fig. 09

Note : Link all cables before connecting electric power

### Fixture Linking

You will need a serial data link to run light shows of one or more fixtures using a DMX-512 controller or to run synchronized shows of two or more fixtures set to a master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

**Important:** Fixtures on a serial data link must be daisy-chained in a single line. To comply with the EIA-485 standard, no more than 30 devices should be connected on one data link. Connecting more than 30 fixtures on one serial data link without the use of a DMX optically isolated splitter may result in deterioration of the digital DMX signal.

 Maximum recommended DMX data link distance: 100 meters  
Maximum recommended number of fixtures on a DMX data link: 30 fixtures  
Maximum recommended number of fixtures on a power link @120V: 3 fixtures  
Maximum recommended number of fixtures on a power link @230V: 6 fixtures

### Data Cabling

To link fixtures together, you must obtain data cables. You can purchase DAP Audio certified DMX cables directly from a dealer/distributor or construct your own cable. If you choose to create your own cable, please use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

#### DAP Audio DMX Data Cables

- DAP Audio Basic microphone cable for allround use. bal. XLR/M 3-pin > XLR/F 3-pin. **Ordercode** FL01150 (1,5 m), FL013 (3 m), FL016 (6 m), FL0110 (10 m), FL0115 (15 m), FL0120 (20 m).
- DAP Audio X-type data cable XLR/M 3-pin > XLR/F 3-pin. **Ordercode** FLX0175 (0,75 m), FLX01150 (1,5 m), FLX013 (3 m), FLX016 (6 m), FLX0110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL71150 (1,5 m), FL713 (3 m), FL716 (6 m), FL7110 (10 m).
- DAP Audio cable for the demanding user with exceptional audio-qualities and connector made by Neutrik®. **Ordercode** FL7275 (0,75 m), FL72150 (1,5 m), FL723 (3 m), FL726 (6 m), FL7210 (10 m).
- DAP Audio 110 Ohm cable with digital signal transmission. **Ordercode** FL0975 (0,75 m), FL09150 (1,5 m), FL093 (3 m), FL096 (6 m), FL0910 (10 m), FL0915 (15 m), FL0920 (20 m).

The Phantom 3R Hybrid can be operated with a controller in **control mode** or without the controller in **stand-alone mode**.

### Control Panel

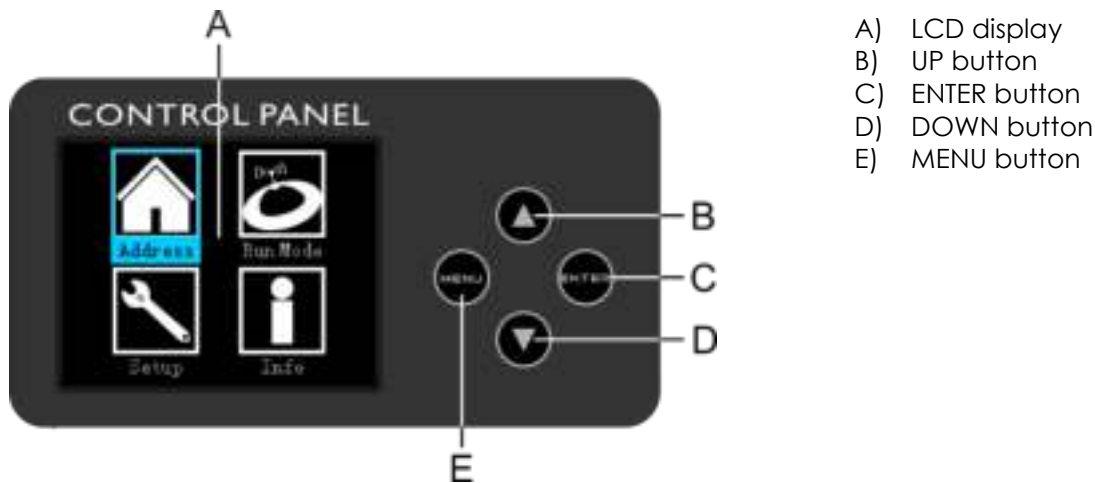


Fig. 10

### Control Mode

The fixtures are individually addressed on a data-link and connected to the controller. The fixtures respond to the DMX signal from the controller. (When you select the DMX address and save it, the controller will display the saved DMX address, next time.)

### DMX Addressing

The control panel on the front side of the base allows you to assign DMX fixture addresses, which is the first channel with which the Phantom will respond to the controller.

Please note, when you use the controller, the unit has **19** channels.

When using multiple Phantoms, make sure you set the DMX addresses right.

Therefore, the DMX address of the first Phantom should be **1(001)**; the DMX address of the second Phantom should be **1+19=20 (020)**; the DMX address of the third Phantom should be **20+19=39 (039)**, etc. Please, be sure that you do not have any overlapping channels in order to control each Phantom correctly. If two or more Phantoms are addressed similarly, they will work similarly.

### Controlling:

After having addressed all Phantom fixtures, you may now start operating these via your lighting controller.

**Note:** After switching on, the Phantom will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the "**LED**" on the control panel will not flash.

If not, the problem may be:

- The XLR cable from the controller is not connected with the input of the Phantom 3R Hybrid.
- The controller is switched off or defective, the cable or connector is defective, or the signal wires are swapped in the input connector.

**Note:** It is necessary to insert an XLR termination plug (with 120 Ohm) in the last fixture in order to ensure proper transmission on the DMX data link.




### Display Off after 35 seconds



When no button is pressed for 35 seconds, the display will turn off. To light up the display, you have to press the MENU or ENTER button. Once you have pressed the button, the display will light up.



## Menu Overview

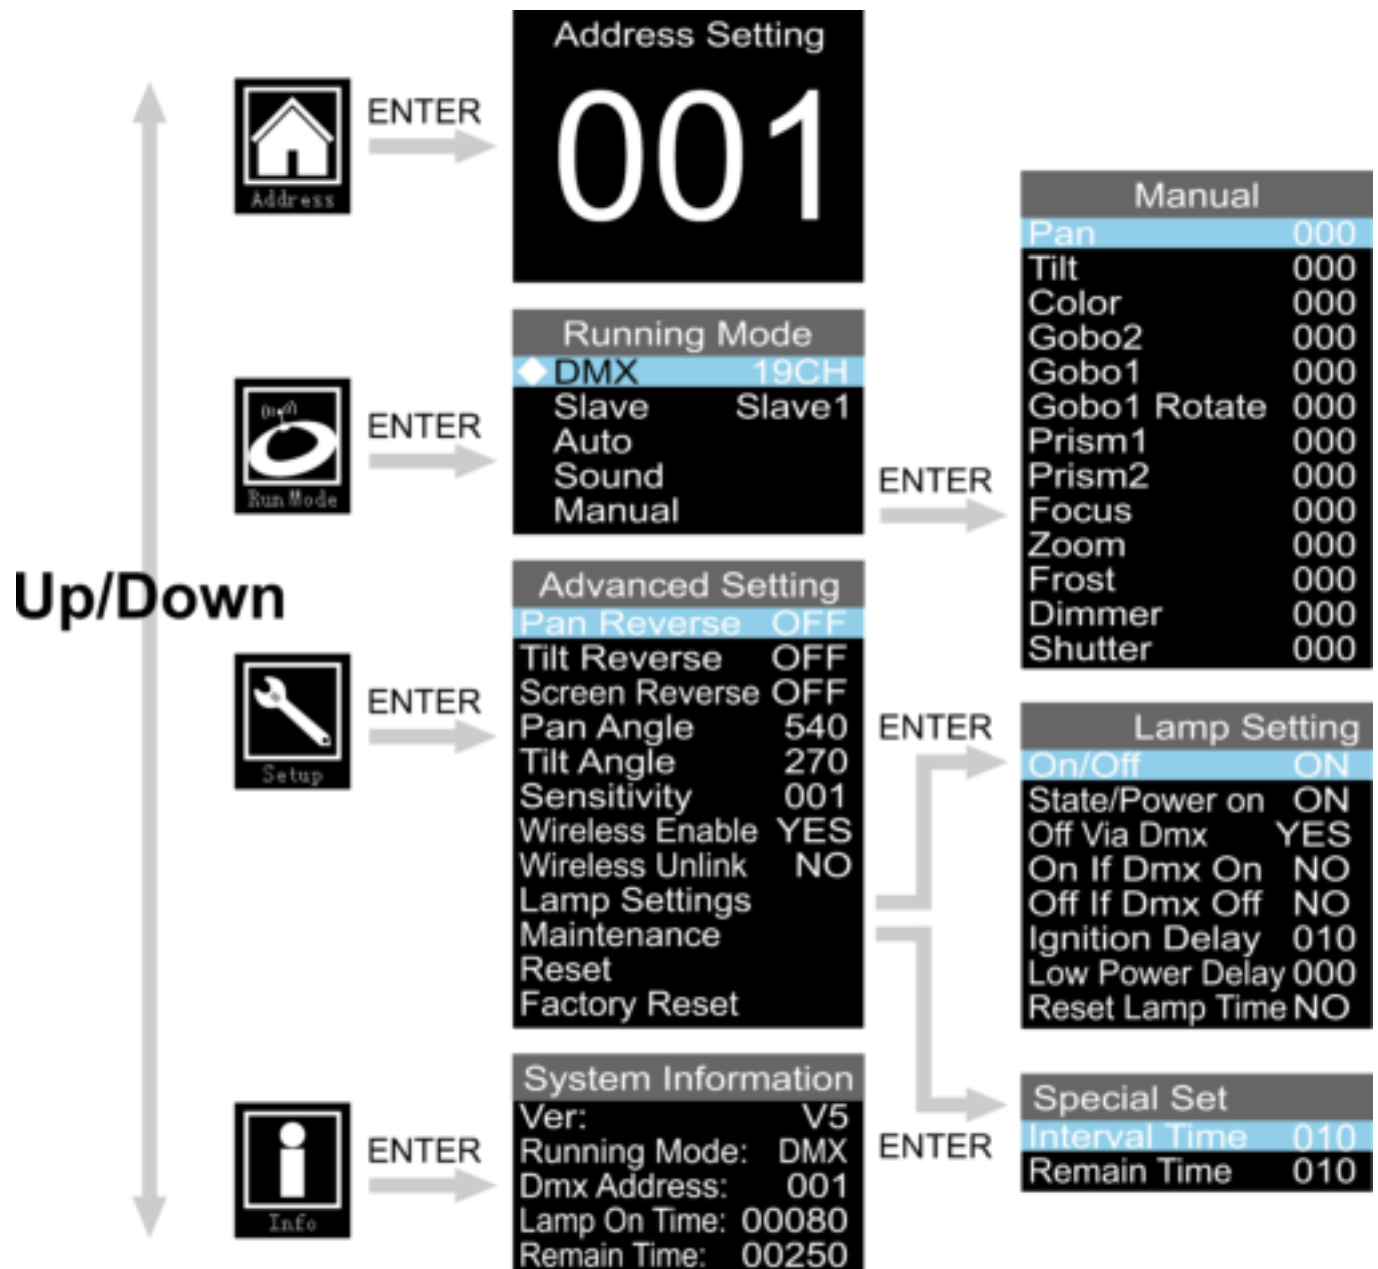



## Main Menu Options



DMX Addressing



DMX mode / Master-Slave / Auto / Sound-controlled / Manual



Pan and Tilt Reverse / Screen Reverse / Pan and Tilt Angle / Sound Sensitivity / Wireless Enable / Wireless Unlink / Lamp Settings / Maintenance / Reset / Factory Reset



System Information

Upon start-up, the device will show its currently active mode, as well as the information concerning Pan and Tilt. Press the **MENU** or **ENTER** buttons to enter the main menu.



## DMX Addressing

With this menu you can set the DMX address.




- 01) Press the **UP/DOWN** buttons, until the display shows
- 02) Press the **ENTER** button to confirm. You can choose 512 different DMX addresses.
- 03) Press the **UP/DOWN** buttons to select the required address from 001-512.
- 04) Press the **ENTER** button to confirm the address.

## Built-in Programs Mode

You can run the auto programs when using the Phantom.



- 01) While in the main menu, press the **UP/DOWN** buttons until the display shows
- 02) Press the **ENTER** button to open the menu.
- 03) Press the **UP/DOWN** buttons to select one of the 5 modes:

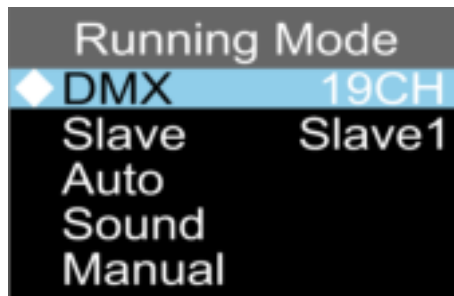

### 1. DMX Mode

- 01) When the display shows DMX, press the **ENTER** button to open the menu.
- 02) Press the **UP/DOWN** buttons to toggle between the 2 channel modes:
  - 14 channels
  - 19 channels
- 03) Press the **ENTER** button to confirm your choice.

### 2. Slave Mode

- 01) Press the **UP/DOWN** buttons until the display shows SLAVE.
- 02) Press the **ENTER** button to open the menu.
- 03) Press the **UP/DOWN** buttons to set the device as the first, second, third or fourth slave device (Slave1-Slave4).
- 04) Press the **ENTER** button to save changes.
- 05) The device is now operating in the slave mode. It means that it will react the same as the master device. You can connect up to 4 slave devices to one master device.

### 3. Auto Mode

- 01) Press the **UP/DOWN** buttons until the display shows AUTO.
- 02) Press the **ENTER** button to activate the Auto mode.
- 03) The device will now run the built-in auto show.

### 4. Sound-controlled Mode

- 01) Press the **UP/DOWN** buttons until the display shows SOUND.
- 02) Press the **ENTER** button to activate the Sound-controlled mode.
- 03) The device will now react to the beat of the background music by means of the built-in microphone.

### 5. Manual Mode

- 01) Press the **UP/DOWN** buttons until the display shows MANUAL.
- 02) Press the **ENTER** button to activate the Manual mode.
- 03) The display will show:


| Manual       |     |
|--------------|-----|
| Pan          | 000 |
| Tilt         | 000 |
| Color        | 000 |
| Gobo2        | 000 |
| Gobo1        | 000 |
| Gobo1 Rotate | 000 |
| Prism1       | 000 |
| Prism2       | 000 |
| Focus        | 000 |
| Zoom         | 000 |
| Frost        | 000 |
| Dimmer       | 000 |
| Shutter      | 000 |

- 04) Press the **UP/DOWN** buttons to choose one of the following options:
  - Pan (Pan position: 0-540°)
  - Tilt (Tilt position: 0-270°)
  - Color
  - Gobo2
  - Gobo1
  - Gobo1 Rotate
  - Prism1
  - Prism2
  - Focus
  - Zoom
  - Frost
  - Dimmer (from dark to brightest)
  - Shutter
- 05) Press the **ENTER** button to edit the desired option. The adjustment range for each option is between 0-255.
- 06) Press the **UP/DOWN** buttons to set the value.
- 07) Press the **ENTER** button to save changes.
- 08) The options correspond with the functions described in the DMX charts, pages 19-26.

## Advanced Settings



- 01) While in the main menu, press the **UP/DOWN** buttons until the display shows
- 02) Press the **ENTER** button to open the menu.
- 03) The display will show:

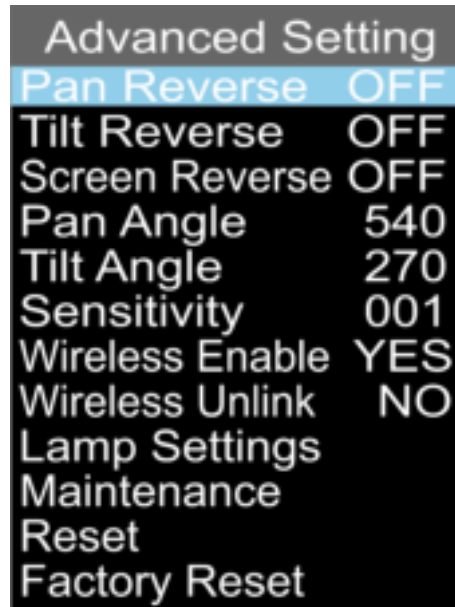

- 04) Press the **UP/DOWN** buttons to toggle between the following options:
  - Pan Reverse (ON/OFF)
  - Tilt Reverse (ON/OFF)
  - Screen Reverse (ON/OFF)
  - Pan Angle (180°/360°/540°)
  - Tilt Angle (90°/180°/270°)
  - Sensitivity (001-100, from low to high sound sensitivity)
  - Wireless Enable (activate wireless DMX, YES/NO)
  - Wireless Unlink (unlink the device, YES/NO)
  - Lamp Settings (see page 18 for more information)
  - Maintenance (see page 18 for more information)
  - Reset (Pan/Tilt reset)
  - Factory Reset (Full reset, restores factory settings)
- 05) Press the **ENTER** button to edit the desired option.
- 06) Press the **UP/DOWN** buttons to set the value.
- 07) Press the **ENTER** button to save changes.

## 1. Lamp Settings

01) If you have chosen LAMP SETTINGS (in step 4, page 17), the display will show:

| Lamp Setting    |     |
|-----------------|-----|
| On/Off          | ON  |
| State/Power on  | ON  |
| Off Via Dmx     | YES |
| On If Dmx On    | NO  |
| Off If Dmx Off  | NO  |
| Ignition Delay  | 010 |
| Low Power Delay | 000 |
| Reset Lamp Time | NO  |

02) Press the **UP/DOWN** buttons to toggle between the following options:

- On/Off (switch the lamp on and off, ON/OFF)
- State/Power on (define whether the lamp is on or off upon start-up, ON/OFF)
- Off via DMX (adjust the dimmer via DMX, YES/NO)
- On if DMX on (if the device receives DMX, the lamp will be on; YES/NO)
- Off if DMX off (if the device does not receive DMX, the lamp will be off; YES/NO)
- Ignition delay (define the number of seconds which need to pass after start-up before the lamp turns on, 0-255)
- Low power delay (define the number of seconds which need to pass after start-up before the device calibrates its gobos and pan/tilt motors, 0-255)
- Reset lamp time

03) Press the **ENTER** button to edit the desired option.

04) Press the **UP/DOWN** buttons to set the value.

05) Press the **ENTER** button to save changes.

## 2. Maintenance

01) If you have chosen MAINTENANCE (in step 4, page 17), the display will show:

| Special Set   |     |
|---------------|-----|
| Interval Time | 010 |
| Remain Time   | 010 |

02) Press the **UP/DOWN** buttons to toggle between the following options:

- Interval Time (define the number of hours after which the device should undergo a safety check, 10-250)
- Remain Time (reset the internal maintenance clock after each safety check, NO/RESET)

03) Press the **ENTER** button to edit the desired option.

04) Press the **UP/DOWN** buttons to set the value.

05) Press the **ENTER** button to save changes.

## System Information

In this menu you can see the currently active mode, the DMX starting address, the current software version, lamp on time (lamp's operating hours) and remain time (time which needs to pass before a safety check should take place).



- 01) While in the main menu, press the **UP/DOWN** buttons until the display shows
- 02) Press the **ENTER** button to open the menu and view the parameters.

```
System Information
Ver:           V5
Running Mode:  DMX
Dmx Address:   001
Lamp On Time:  00080
Remain Time:   00250
```

## DMX Channels

### 14 Channels

#### Channel 1 – Horizontal movement (Pan)

Move the slider up, in order to move head horizontally (PAN).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 540° and stopped at any position you wish.

#### Channel 2 – Vertical movement (Tilt)

Move the slider up, in order to move head vertically (TILT).

Gradual head adjustment from one end of the slider to the other (0-255, 128-center).

The head can be turned by 270° and stopped at any position you wish.

#### Channel 3 – Dimmer intensity

|       |                        |
|-------|------------------------|
| 0-255 | From dark to brightest |
|-------|------------------------|

#### Channel 4 – Shutter/Strobe

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-15    | Shutter open  |
| 16-131  | Synchronized strobe, from low to high frequency         |
| 132-167 | Fast close/slow open strobe, from low to high frequency |
| 168-203 | Slow close/fast open strobe, from low to high frequency |
| 204-239 | Pulse strobe, from low to high frequency                |
| 240-250 | Random strobe effect, from low to high frequency        |
| 251-255 | Shutter open  |



## Channel 5 – Color wheel ⚠ CH3 must be open and CH4 must be set between 8-15 or 251-255 ⚠

Linear color change following the movement of the slider. Between 188-219 and 224-255, the color wheel rotates continuously (so-called "Rainbow" effect).

|         |   |
|---------|---|
| 0-3     | Open / White  |
| 4-7     | Red   |
| 8-11    | Yellow  |
| 12-15   | Green   |
| 16-19   | Light Blue  |
| 20-23   | Pink  |
| 24-28   | Lime  |
| 29-33   | Blue  |
| 34-38   | Purple  |
| 39-43   | Light Green   |
| 44-48   | CTO   |
| 49-53   | CTB   |
| 54-59   | UV  |
| 60-73   | Gradual split color White/Red                                     |
| 74-83   | Gradual split color Red/Yellow                                    |
| 84-92   | Gradual split color Yellow/Green                                  |
| 93-102  | Gradual split color Green/Light Blue                              |
| 103-112 | Gradual split color Light Blue/Pink                               |
| 113-122 | Gradual split color Pink/Lime                                     |
| 123-131 | Gradual split color Lime/Blue                                     |
| 132-141 | Gradual split color Blue/Purple                                   |
| 142-151 | Gradual split color Purple/Light Green                            |
| 152-161 | Gradual split color Light Green/CTO                               |
| 162-170 | Gradual split color CTO/CTB                                       |
| 171-180 | Gradual split color CTB/ UV                                       |
| 181-187 | Gradual split color UV/White                                      |
| 188-219 | Counterclockwise rotation (CCW) rainbow effect, from fast to slow |
| 220-223 | Stop  |
| 224-255 | Clockwise rotation (CW) rainbow effect, from slow to fast         |



## Channel 6 – Static gobo wheel + gobo shake


|       |                                 |
|-------|---------------------------------|
| 0-2   | Open / White                    |
| 3-5   | Gobo 1                          |
| 6-8   | Gobo 2                          |
| 9-11  | Gobo 3                          |
| 12-14 | Gobo 4                          |
| 15-17 | Gobo 5                          |
| 18-20 | Gobo 6                          |
| 21-23 | Gobo 7                          |
| 24-26 | Gobo 8                          |
| 27-29 | Gobo 9                          |
| 30-32 | Gobo 10                         |
| 33-35 | Gobo 11                         |
| 36-38 | Gobo 12                         |
| 39-41 | Gobo 13                         |
| 42-44 | Gobo 14                         |
| 45-47 | Gobo 15                         |
| 48-50 | Gobo 16                         |
| 51-54 | Gobo Shake 16 from slow to fast |
| 55-58 | Gobo Shake 15 from slow to fast |
| 59-62 | Gobo Shake 14 from slow to fast |
| 63-66 | Gobo Shake 13 from slow to fast |
| 67-70 | Gobo Shake 12 from slow to fast |
| 71-74 | Gobo Shake 11 from slow to fast |



|         |   |
|---------|---|
| 75-78   | Gobo Shake 10 from slow to fast                                   |
| 79-82   | Gobo Shake 9 from slow to fast                                    |
| 83-86   | Gobo Shake 8 from slow to fast                                    |
| 87-90   | Gobo Shake 7 from slow to fast                                    |
| 91-94   | Gobo Shake 6 from slow to fast                                    |
| 95-98   | Gobo Shake 5 from slow to fast                                    |
| 99-102  | Gobo Shake 4 from slow to fast                                    |
| 103-106 | Gobo Shake 3 from slow to fast                                    |
| 107-110 | Gobo Shake 2 from slow to fast                                    |
| 111-114 | Gobo Shake 1 from slow to fast                                    |
| 115-127 | Open / White  |
| 128-189 | Counterclockwise rotation (CCW) rainbow effect, from fast to slow |
| 190-193 | Stop  |
| 194-255 | Clockwise rotation (CW) rainbow effect, from slow to fast         |

## Channel 7 – Rotating gobo wheel + gobo shake

|         |   |
|---------|---|
| 0-5     | Not functional  |
| 6-11    | Open / White  |
| 12-17   | Gobo 1 (Glass)  |
| 18-23   | Gobo 2 (Metal)  |
| 24-29   | Gobo 3 (Metal)  |
| 30-35   | Gobo 4 (Metal)  |
| 36-41   | Gobo 5 (Metal)  |
| 42-47   | Gobo 6 (Metal)  |
| 48-53   | Gobo 7 (Metal)  |
| 54-63   | Gobo 8 (Metal)  |
| 64-73   | Gobo Shake 8 from slow to fast                                    |
| 74-79   | Gobo Shake 7 from slow to fast                                    |
| 80-85   | Gobo Shake 6 from slow to fast                                    |
| 86-91   | Gobo Shake 5 from slow to fast                                    |
| 92-97   | Gobo Shake 4 from slow to fast                                    |
| 98-103  | Gobo Shake 3 from slow to fast                                    |
| 104-109 | Gobo Shake 2 from slow to fast                                    |
| 110-115 | Gobo Shake 1 from slow to fast                                    |
| 116-127 | Open / White  |
| 128-189 | Clockwise rotation (CW) rainbow effect, from fast to slow         |
| 190-193 | Stop  |
| 194-255 | Counterclockwise rotation (CCW) rainbow effect, from slow to fast |

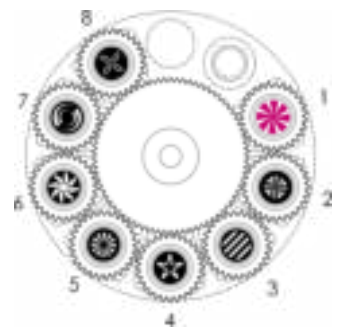

## Channel 8 – Gobo rotation

|         |  |
|---------|--|
| 0-63    | Gobo indexing  |
| 64-145  | Clockwise rotation (CW), from fast to slow                       |
| 146-149 | Stop   |
| 150-231 | Counterclockwise rotation (CCW), from slow to fast               |
| 232-255 | Gobo bouncing, from quick short bounce to longer rotation bounce |

## Channel 9 – Prism 1 + rotation

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-12    | Prism   |
| 13-130  | Clockwise rotation (CW) prism effect, from slow to fast         |
| 131-247 | Counterclockwise rotation (CCW) prism effect, from slow to fast |
| 248-255 | Prism   |

**Channel 10 – Prism 2 + rotation**

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-12    | Prism   |
| 13-130  | Clockwise rotation (CW) prism effect, from slow to fast         |
| 131-247 | Counterclockwise rotation (CCW) prism effect, from slow to fast |
| 248-255 | Prism   |

**Channel 11 – Focus**

|       |                       |
|-------|-----------------------|
| 0-255 | Continuous adjustment |
|-------|-----------------------|

**Channel 12 – Zoom**

|       |  |
|-------|--|
| 0-255 | Continuous adjustment, from big to small |
|-------|--|

**Channel 13 – Frost**

|       |  |
|-------|--|
| 0-255 | Frost adjustment, from OFF to full frost |
|-------|--|

**Channel 14 – Built-in programs + sound-controlled programs**

|         |                            |
|---------|----------------------------|
| 0-7     | Not functional             |
| 8-23    | Built-in Program 1         |
| 24-39   | Built-in Program 2         |
| 40-55   | Built-in Program 3         |
| 56-71   | Built-in Program 4         |
| 72-87   | Built-in Program 5         |
| 88-103  | Built-in Program 6         |
| 104-119 | Built-in Program 7         |
| 120-135 | Built-in Program 8         |
| 136-151 | Sound-controlled Program 1 |
| 152-167 | Sound-controlled Program 2 |
| 168-183 | Sound-controlled Program 3 |
| 184-199 | Sound-controlled Program 4 |
| 200-215 | Sound-controlled Program 5 |
| 216-231 | Sound-controlled Program 6 |
| 232-247 | Sound-controlled Program 7 |
| 248-255 | Sound-controlled Program 8 |

**19 Channels****Channel 1 – Horizontal movement (Pan)**

Move the slider up, in order to move head horizontally (PAN).  
 Gradual head adjustment from one end of the slider to the other (0-255, 128-center).  
 The head can be turned by 540° and stopped at any position you wish.

**Channel 2 – Vertical movement (Tilt)**

Move the slider up, in order to move head vertically (TILT).  
 Gradual head adjustment from one end of the slider to the other (0-255, 128-center).  
 The head can be turned by 270° and stopped at any position you wish.

**Channel 3 – Pan fine 16 bit****Channel 4 – Tilt fine 16 bit****Channel 5 – PAN/TILT Speed**

|       |  |
|-------|--|
| 0-255 | From Max Speed (0) to Min. Speed (255) |
|-------|--|

## Channel 6 – Dimmer intensity

0-255 From dark to brightest

## Channel 7 – Shutter/Strobe

0-7 Not functional

8-15 Shutter open

16-131 Synchronized strobe, from low to high frequency

132-167 Fast close/slow open strobe, from low to high frequency

168-203 Slow close/fast open strobe, from low to high frequency

204-239 Pulse strobe, from low to high frequency

240-250 Random strobe effect, from low to high frequency

251-255 Shutter open

## Channel 8 – Color wheel ⚠ CH6 must be open and CH7 must be set between 8-15 or 251-255 ⚠

Linear color change following the movement of the slider. Between 188-219 and 224-255, the color wheel rotates continuously (so-called "Rainbow" effect).

0-3 Open / White

4-7 Red

8-11 Yellow

12-15 Green

16-19 Light Blue

20-23 Pink

24-28 Lime

29-33 Blue

34-38 Purple

39-43 Light Green

44-48 CTO

49-53 CTB

54-59 UV

60-73 Gradual split color White/Red

74-83 Gradual split color Red/Yellow

84-92 Gradual split color Yellow/Green

93-102 Gradual split color Green/Light Blue

103-112 Gradual split color Light Blue/Pink

113-122 Gradual split color Pink/Lime

123-131 Gradual split color Lime/Blue

132-141 Gradual split color Blue/Purple

142-151 Gradual split color Purple/Light Green

152-161 Gradual split color Light Green/CTO

162-170 Gradual split color CTO/CTB

171-180 Gradual split color CTB/UV

181-187 Gradual split color UV/White

188-219 Counterclockwise rotation (CCW) rainbow effect, from fast to slow

220-223 Stop

224-255 Clockwise rotation (CW) rainbow effect, from slow to fast




## Channel 9 – Static gobo wheel + gobo shake

|         |   |
|---------|---|
| 0-2     | Open / White  |
| 3-5     | Gobo 1  |
| 6-8     | Gobo 2  |
| 9-11    | Gobo 3  |
| 12-14   | Gobo 4  |
| 15-17   | Gobo 5  |
| 18-20   | Gobo 6  |
| 21-23   | Gobo 7  |
| 24-26   | Gobo 8  |
| 27-29   | Gobo 9  |
| 30-32   | Gobo 10   |
| 33-35   | Gobo 11   |
| 36-38   | Gobo 12   |
| 39-41   | Gobo 13   |
| 42-44   | Gobo 14   |
| 45-47   | Gobo 15   |
| 48-50   | Gobo 16   |
| 51-54   | Gobo Shake 16 from slow to fast                                   |
| 55-58   | Gobo Shake 15 from slow to fast                                   |
| 59-62   | Gobo Shake 14 from slow to fast                                   |
| 63-66   | Gobo Shake 13 from slow to fast                                   |
| 67-70   | Gobo Shake 12 from slow to fast                                   |
| 71-74   | Gobo Shake 11 from slow to fast                                   |
| 75-78   | Gobo Shake 10 from slow to fast                                   |
| 79-82   | Gobo Shake 9 from slow to fast                                    |
| 83-86   | Gobo Shake 8 from slow to fast                                    |
| 87-90   | Gobo Shake 7 from slow to fast                                    |
| 91-94   | Gobo Shake 6 from slow to fast                                    |
| 95-98   | Gobo Shake 5 from slow to fast                                    |
| 99-102  | Gobo Shake 4 from slow to fast                                    |
| 103-106 | Gobo Shake 3 from slow to fast                                    |
| 107-110 | Gobo Shake 2 from slow to fast                                    |
| 111-114 | Gobo Shake 1 from slow to fast                                    |
| 115-127 | Open / White  |
| 128-189 | Counterclockwise rotation (CCW) rainbow effect, from fast to slow |
| 190-193 | Stop  |
| 194-255 | Clockwise rotation (CW) rainbow effect, from slow to fast         |



## Channel 10 – Rotating gobo wheel + gobo shake

|         |                                |
|---------|--------------------------------|
| 0-5     | Not functional                 |
| 6-11    | Open / White                   |
| 12-17   | Gobo 1 (Glass)                 |
| 18-23   | Gobo 2 (Metal)                 |
| 24-29   | Gobo 3 (Metal)                 |
| 30-35   | Gobo 4 (Metal)                 |
| 36-41   | Gobo 5 (Metal)                 |
| 42-47   | Gobo 6 (Metal)                 |
| 48-53   | Gobo 7 (Metal)                 |
| 54-63   | Gobo 8 (Metal)                 |
| 64-73   | Gobo Shake 8 from slow to fast |
| 74-79   | Gobo Shake 7 from slow to fast |
| 80-85   | Gobo Shake 6 from slow to fast |
| 86-91   | Gobo Shake 5 from slow to fast |
| 92-97   | Gobo Shake 4 from slow to fast |
| 98-103  | Gobo Shake 3 from slow to fast |
| 104-109 | Gobo Shake 2 from slow to fast |

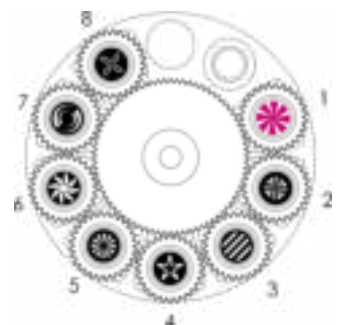



|         |   |
|---------|---|
| 110-115 | Gobo Shake 1 from slow to fast                                    |
| 116-127 | Open / White  |
| 128-189 | Clockwise rotation (CW) rainbow effect, from fast to slow         |
| 190-193 | Stop  |
| 194-255 | Counterclockwise rotation (CCW) rainbow effect, from slow to fast |

## Channel 11 – Gobo rotation

|         |  |
|---------|--|
| 0-63    | Gobo indexing  |
| 64-145  | Clockwise rotation (CW), from fast to slow                       |
| 146-149 | Stop   |
| 150-231 | Counterclockwise rotation (CCW), from slow to fast               |
| 232-255 | Gobo bouncing, from quick short bounce to longer rotation bounce |

## Channel 12 – Prism 1 + rotation

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-12    | Prism   |
| 13-130  | Clockwise rotation (CW) prism effect, from slow to fast         |
| 131-247 | Counterclockwise rotation (CCW) prism effect, from slow to fast |
| 248-255 | Prism   |

## Channel 13 – Prism 2 + rotation

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-12    | Prism   |
| 13-130  | Clockwise rotation (CW) prism effect, from slow to fast         |
| 131-247 | Counterclockwise rotation (CCW) prism effect, from slow to fast |
| 248-255 | Prism   |

## Channel 14 – Focus

|       |                       |
|-------|-----------------------|
| 0-255 | Continuous adjustment |
|-------|-----------------------|

## Channel 15 – Auto focus

|         |                   |
|---------|-------------------|
| 0-10    | Not functional    |
| 11-127  | Auto focus gobo 1 |
| 128-255 | Auto focus gobo 2 |

## Channel 16 – Zoom

|       |  |
|-------|--|
| 0-255 | Continuous adjustment, from big to small |
|-------|--|

## Channel 17 – Frost

|       |  |
|-------|--|
| 0-255 | Frost adjustment, from OFF to full frost |
|-------|--|

## Channel 18 – Channel Functions

|         |   |
|---------|---|
| 0-7     | Not functional  |
| 8-15    | Blackout during Pan/Tilt movement                                 |
| 16-23   | Blackout during color wheel movement                              |
| 24-31   | Blackout during gobo wheel movement                               |
| 32-39   | Blackout during Pan-Tilt/color wheel movement                     |
| 40-47   | Blackout during Pan-Tilt/gobo wheel movement                      |
| 48-55   | Blackout during Pan-Tilt/color wheel movement/gobo wheel movement |
| 56-87   | Blackout reset  |
| 88-95   | Lamp on   |
| 96-103  | Pan reset   |
| 104-111 | Tilt reset  |
| 112-119 | Color wheel reset   |
| 120-127 | Gobo wheel reset  |
| 128-135 | Not functional  |
| 136-143 | Reset prism   |



|         |                  |
|---------|------------------|
| 144-151 | Focus/zoom reset |
| 152-159 | Reset all        |
| 160-167 | Strobe reset     |
| 168-231 | Not functional   |
| 232-239 | Lamp off         |
| 240-255 | Not functional   |

**Channel 19 – Built-in programs + sound-controlled programs**

|         |                            |
|---------|----------------------------|
| 0-7     | Not functional             |
| 8-23    | Built-in Program 1         |
| 24-39   | Built-in Program 2         |
| 40-55   | Built-in Program 3         |
| 56-71   | Built-in Program 4         |
| 72-87   | Built-in Program 5         |
| 88-103  | Built-in Program 6         |
| 104-119 | Built-in Program 7         |
| 120-135 | Built-in Program 8         |
| 136-151 | Sound-controlled Program 1 |
| 152-167 | Sound-controlled Program 2 |
| 168-183 | Sound-controlled Program 3 |
| 184-199 | Sound-controlled Program 4 |
| 200-215 | Sound-controlled Program 5 |
| 216-231 | Sound-controlled Program 6 |
| 232-247 | Sound-controlled Program 7 |
| 248-255 | Sound-controlled Program 8 |

## Maintenance

The operator has to make sure that safety-related and machine-technical installations are to be inspected by an expert after every year in the course of an acceptance test.  
The operator has to make sure that safety-related and machine-technical installations are to be inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 01) All screws used for installing the device or parts of the device have to be tightly connected and must not be corroded.
- 02) There may not be any deformations on housings, fixations and installation spots.
- 03) Mechanically moving parts like axles, eyes and others may not show any traces of wearing.
- 04) The electric power supply cables must not show any damages or material fatigue.

The Phantom 3R Hybrid requires almost no maintenance. However, you should keep the unit clean. Otherwise, the fixture's light output will be significantly reduced. Disconnect the mains power supply, and then wipe the cover with a damp cloth. Do not immerse in liquid. Wipe lens clean with glass cleaner and a soft cloth. Do not use alcohol or solvents.

The front lens will require weekly cleaning, as smoke-fluid tends to build up residues, reducing the light output very quickly. The cooling fans, color wheel, the gobo wheel, the gobos and the internal lenses should be cleaned monthly, with a soft brush.

Please clean internal components once a year with a light brush and vacuum cleaner.

Keep connections clean. Disconnect electric power, and then wipe the DMX and audio connections with a damp cloth. Make sure connections are thoroughly dry before linking equipment or supplying electric power.

### Replacing the Fuse

Power surges, short-circuit or inappropriate electrical power supply may cause a fuse to burn out. If the fuse burns out, the product will not function whatsoever. If this happens, follow the directions below.

- 01) Unplug the unit from electric power source.
- 02) Insert a screwdriver into the fuse holder. Turn the fuse holder counterclockwise. The fuse holder will come out.
- 03) Remove the used fuse. If brown or unclear, it is burned out.
- 04) Insert the replacement fuse into the holder where the old fuse was. Reinsert the fuse holder. Be sure to use a fuse of the same type and specification. See the product specification label for details.

### Replacing a Gobo From the Rotating Gobo Wheel

- 01) Disconnect mains power supply and set the switch to OFF.
- 02) Make sure that the gobo you want to insert has the same size. For the right size, see below.

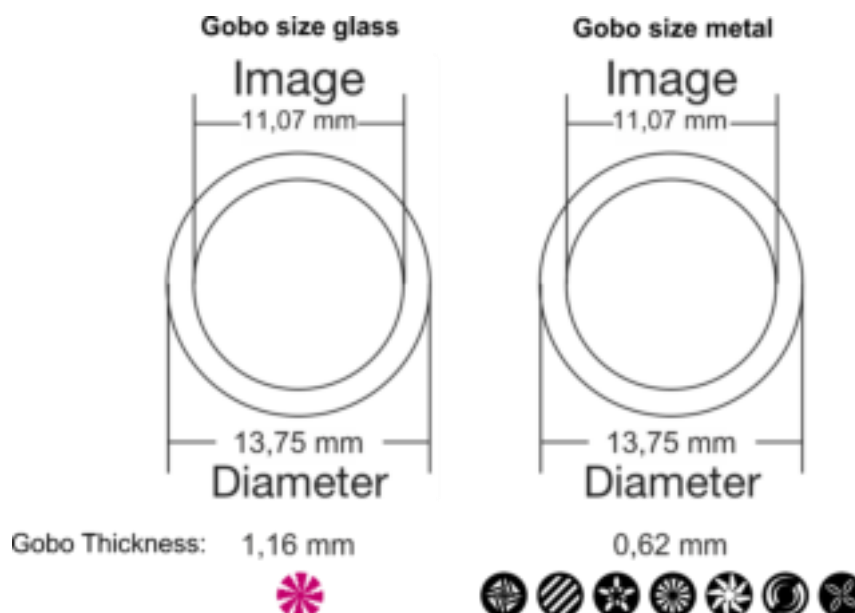
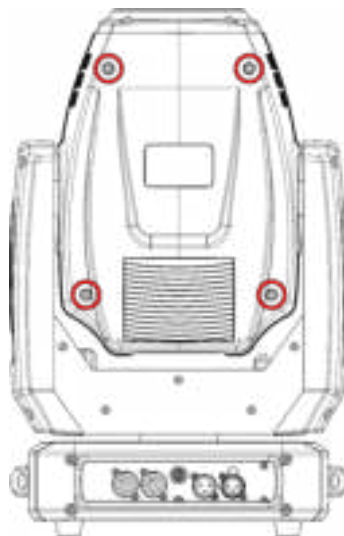


Fig. 11



**Fig. 12**

- 03) Remove the lamp cover by unscrewing the 4 screws (see fig. 12).
- 04) Gently tilt the head so that the small metal housing can slide out more easily.
- 05) Turn the gobo wheel, with the gobo you want to remove, to the upside.
- 06) Gently lift up the gobo holder by 10° and then gently pull out the gobo from its position.




**Fig. 13**

- 07) Very carefully take the gobo out of the gobo holder with a pair of pliers.
- 08) Place the new gobo in the gobo holder. Carefully put the pinchcock back. You can use a pair of pliers to press the pinchcock a little bit together.
- 09) Put the gobo holder back under the pressing snap and push it back.
- 10) Replace the maintenance caps and fasten all screws.

## Glass Gobo Orientation


Coated glass gobos are inserted with the coating against the rim of the holder (away from the spring). Textured gobos are inserted with the smooth side against the spring. This provides the best results when combining rotating gobos.

**Coated side**

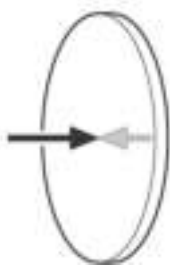

When an object is held up to the coated side there is no space between the object and its reflection. The back edge of the gobo cannot be seen when looking through the coated side.

**Uncoated side**

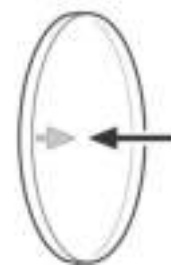

When an object is held up to the uncoated side there is a space between the object and its reflection. The back edge of the gobo can be seen when looking through the uncoated side.

## Static Gobo Wheel + Rotating Gobo Wheel + Color Wheel

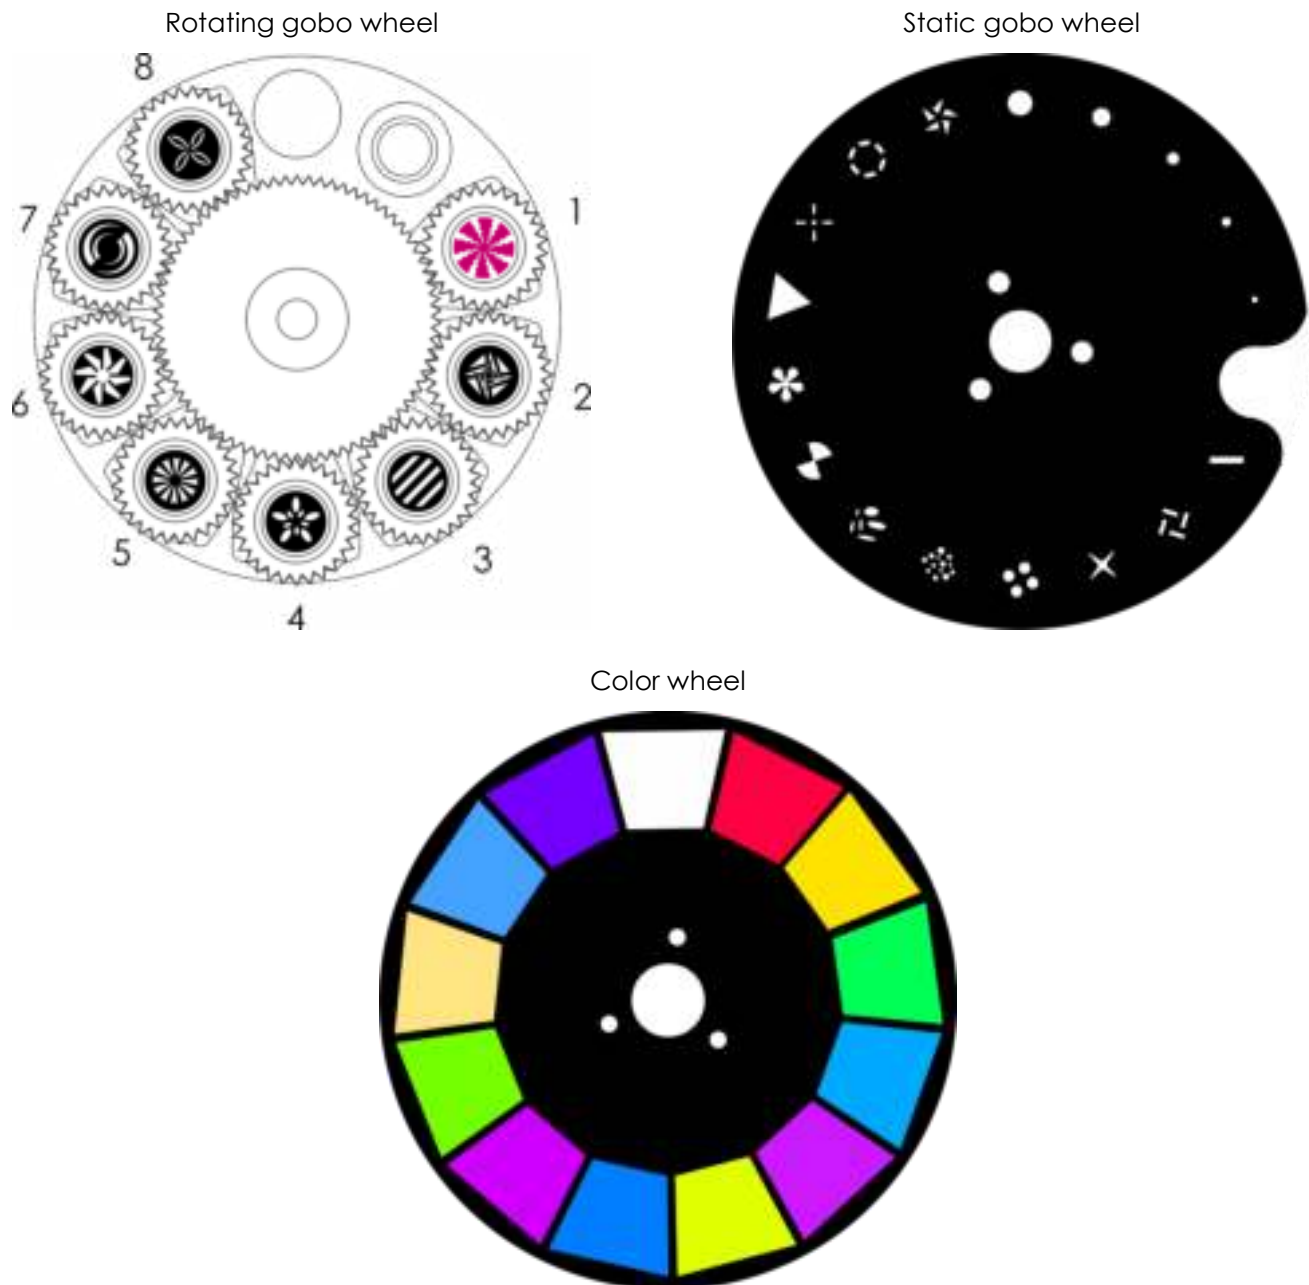


Fig. 14

## Troubleshooting

This troubleshooting guide is meant to help solve simple problems.

If a problem occurs, carry out the steps below in sequence until a solution is found. Once the unit operates properly, do not carry out following steps.

### No Light

If the light effect does not operate properly, refer servicing to a technician.

Suspect three potential problem areas as: the power supply, the lamp, the fuse.

- 01) Power supply. Check if the unit is plugged into an appropriate power supply.
- 02) The lamp. Replace the lamp. See pages 7-8 for installing the lamp.
- 03) The fuse. Replace the fuse. See page 27 for replacing the fuse.
- 04) If all of the above appears to be O.K., plug the unit in again.
- 05) If you are unable to determine the cause of the problem, do not open the Phantom, as this may damage the unit and the warranty will become void.
- 06) Return the device to your Showtec dealer.

## No Response to DMX

Suspect the DMX cable or connectors, a controller malfunction, a light effect DMX card malfunction.

- 01) Check the DMX setting. Make sure that DMX addresses are correct.
- 02) Check the DMX cable: Unplug the unit; change the DMX cable; then reconnect to electrical power. Try your DMX control again.
- 03) Determine whether the controller or light effect is at fault. Does the controller operate properly with other DMX products? If not, take the controller in for repair. If so, take the DMX cable and the light effect to a qualified technician.

| Problem   | Probable cause(s)  | Remedy  |
|---|--|---|
| One or more fixtures do not function at all   | No power to the fixture.   | <ul style="list-style-type: none"> <li>Check if power is switched on and cables are plugged in.</li> </ul>  |
|   | Primary fuse blown.  | <ul style="list-style-type: none"> <li>Replace fuse.</li> </ul>   |
| Fixtures reset correctly, but all respond erratically or not at all to the controller.  | The controller is not connected.   | <ul style="list-style-type: none"> <li>Connect controller.</li> </ul>   |
|   | 3-pin XLR Out of the controller does not match XLR Out of the first fixture on the link (i.e. signal is reversed). | <ul style="list-style-type: none"> <li>Install a phase reversing cable between the controller and the first fixture on the link.</li> </ul>   |
| Fixtures reset correctly, but some respond erratically or not at all to the controller. | Poor data quality  | <ul style="list-style-type: none"> <li>Check data quality. If much lower than 100 percent, the problem may be a bad data link connection, poor quality or broken cables, missing termination plug, or a defective fixture disturbing the link.</li> </ul> |
|   | Bad data link connection   | <ul style="list-style-type: none"> <li>Inspect connections and cables. Correct poor connections. Repair or replace damaged cables.</li> </ul>   |
|   | Data link not terminated with 120 Ohm termination plug.  | <ul style="list-style-type: none"> <li>Insert termination plug in output jack of the last fixture on the link.</li> </ul>   |
|   | Incorrect addressing of the fixtures.  | <ul style="list-style-type: none"> <li>Check address setting.</li> </ul>  |
|   | One of the fixtures is defective and disturbs data transmission on the link.                                       | <ul style="list-style-type: none"> <li>Bypass one fixture at a time until normal operation is regained: unplug both connectors and connect them directly together.</li> <li>Have the defective fixture serviced by a qualified technician.</li> </ul>     |
|   | 3-pin XLR Out on the fixtures does not match (pins 2 and 3 reversed).  | <ul style="list-style-type: none"> <li>Install a phase-reversing cable between the fixtures or swap pin 2 and 3 in the fixture, that behaves erratically.</li> </ul>  |
| Shutter closes suddenly   | The color wheel, gobo wheel or a gobo has lost its index position and the fixture is resetting the effect.         | <ul style="list-style-type: none"> <li>Contact a technician for servicing the problem persists.</li> </ul>  |
| No light or lamp cuts out intermittently  | Fixture is too hot.  | <ul style="list-style-type: none"> <li>Allow fixture to cool.</li> <li>Clean fan.</li> <li>Make sure air vents are not blocked.</li> <li>Turn up the air conditioning.</li> </ul>   |
|   | Lamp damaged   | <ul style="list-style-type: none"> <li>Replace the lamp.</li> </ul>   |
|   | The power supply settings do not match local AC voltage and frequency.   | <ul style="list-style-type: none"> <li>Disconnect fixture. Check settings and correct if necessary.</li> </ul>  |

## Product Specifications

|   |  |
|---|--|
| Model:                                    | Showtec Phantom 3R Hybrid  |
| Input voltage:                            | 100-240V AC, 50/60Hz   |
| Power consumption:                        | 270W (full output)   |
| DMX linking:                              | 30pcs  |
| Fuse:                                     | F5AL/250V  |
| Dimensions:                               | 325 x 210 x 505 mm (LxWxH)   |
| Weight:                                   | 16,7 kg  |
| <b>Operating and Programming:</b>         |  |
| Signal pin OUT:                           | Pin 1 (earth), pin 2 (-), pin 3 (+)  |
| DMX Mode:                                 | 14, 19 channels  |
| Signal input:                             | 3-pin XLR IN   |
| Signal output:                            | 3-pin XLR OUT  |
| <b>Allowed lamp models*</b>               |  |
| <b>82623</b> – Showtec YODN R3 Lamp, 150W |  |
| <b>Electro-mechanical effects:</b>        |  |
| Focus:                                    | Motorized focus  |
| Zoom:                                     | Motorized zoom   |
| Beam angle:                               | 3-20°  |
| Dimmer:                                   | 0-100%   |
| Strobe:                                   | 0-20Hz   |
| Housing:                                  | Metal & flame-retardant plastic  |
| DMX control:                              | via standard DMX controller  |
| Onboard:                                  | LCD display for easy setup   |
| User-selectable Pan range:                | 540°/360°/180°   |
| User-selectable Tilt range:               | 270°/180°/90°  |
| Special:                                  | Pan/Tilt movement blackout<br>Reverse Pan/Tilt movement  |
| Pan/Tilt resolution:                      | 16 bit   |
| Color wheel:                              | 12 dichroic colors + white   |
| Color functions:                          | Rainbow-flow effect, split colors  |
| Static gobo wheel:                        | 17 gobos   |
| Rotating gobo wheel:                      | 1 glass gobo + 7 metal gobos   |
| Gobo size:                                | Glass gobo: 13,75 mm (gobo size); 11,07 mm (image diameter); 1,16 mm (gobo thickness)<br>Metal gobo: 13,75 mm (gobo size); 11,07 mm (image diameter); 0,62 mm (gobo thickness) |
| Gobo functions:                           | Gobo-flow effect, Gobo shake   |
| Control:                                  | Stand alone, Manual, Sound-controlled, Master/Slave, DMX-512   |
| Prism 1:                                  | Circular rotating prism  |
| Prism 2:                                  | Linear rotating prism  |
| Connections:                              | 3-pin XLR IN/OUT, Pro power connector IN/OUT   |
| Cooling:                                  | Cooling fan  |
| Max. ambient temperature $t_a$ :          | 40°C   |
| Max. housing temperature $t_B$ :          | 70°C   |
| <b>Minimum distance:</b>                  |  |
| Minimum distance from flammable surfaces: | 0,5 m  |
| Minimum distance to lighted object:       | 10 m   |

\*: Versions for other lamps may be produced. Please check the specification label on your product.

Design and product specifications are subject to change without prior notice.




Website: [www.Showtec.info](http://www.Showtec.info)

Email: [service@highlite.nl](mailto:service@highlite.nl)



## Dimensions

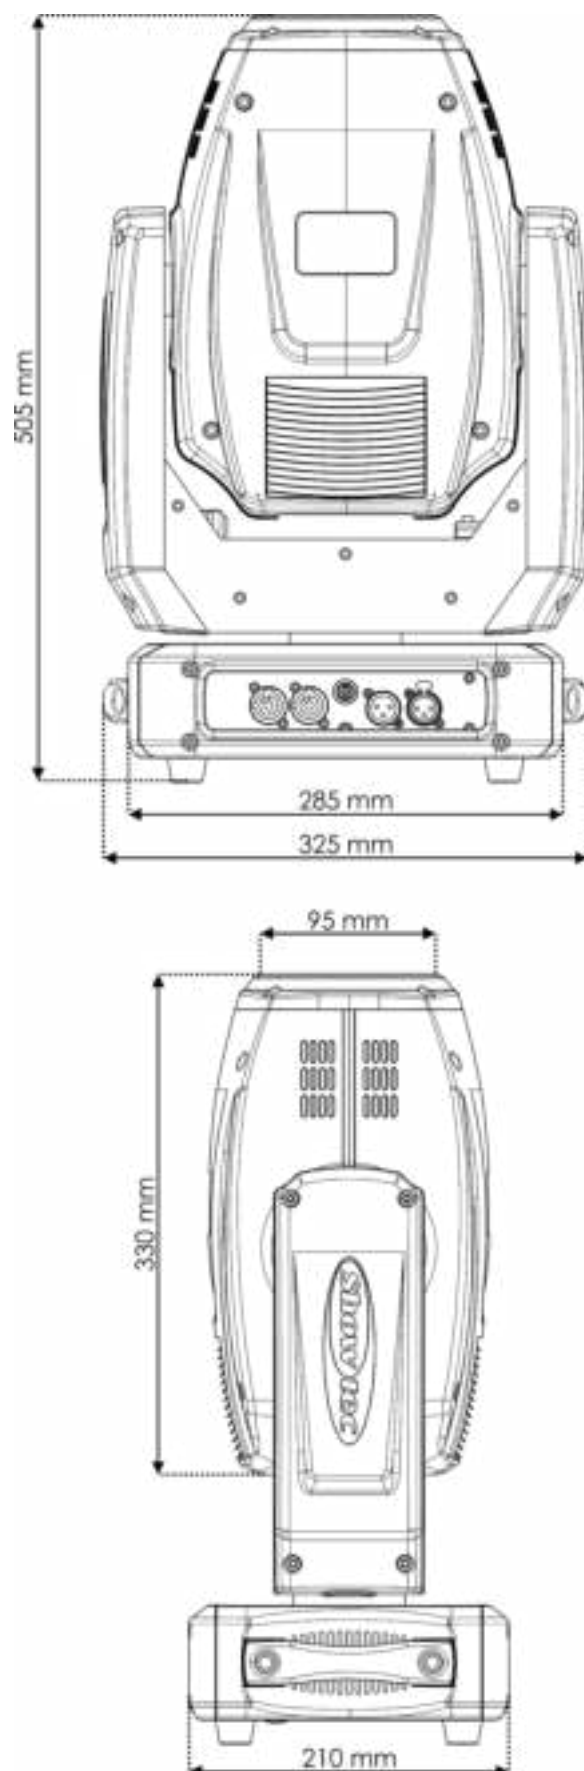

Notes



