

Quick release connection pvc or Austronet wall for roofs.



Add elastic retainers to topside of the wall.



Take care that the knot is in the way as shown



Fix the first elastic retainer in a way that it's position is fixed.



Quick release connection pvc or Austronet wall for roofs.



First retainer, around the lower tube.

The next retainer through the first.



The retainer around the tube and connected to the following retainer. And so on.



Quick release connection pvc or Austronet wall for roofs.


The last retainer has to be connected to the quick release hook.



The quick release hook has to be fixed with a plastic retainer in another way.

With a small rope attached to the quick release going down to the stage the hook can be opened when necessary.

Alternative the quick release part shown can be used.

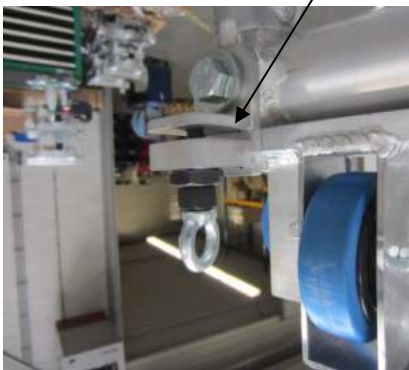

Quick release connection pvc or Austronet wall for roofs.



The wall will be released by itself .

